

Product Finish: Chrome	Product code: ZP1006
	EAN13 barcode: 5060344150897



zoom
HOME INSTALLATION SYSTEM


Product features:

All Zoom taps are provided with:

- Colour coded 600mm long (cut to length) flexible John Guest hoses.
- 10 x 15mm John guest pushfit connectors.
- Non return valves (if required).
- Box spanner for easy affixing.
- Step by step instructions.



Additional information / Parts included:

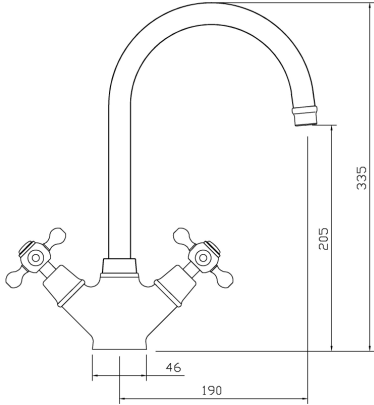


- **Overall Height / projection:** 335 mm
- **Exit reach:** 190 mm
- **Exit height:** 205 mm
- **Centre distance(s):**
- **Base diameter(s):** 46 mm
- **Recommended hole diameter:** Ø35 mm
- **Max. surface depth:** 45 mm
- **Spout diameter:** 22 mm
- **Spout aerator size:** M22x1 F

Box length: 420mm **Box depth:** 75mm

Box width: 235mm **Boxed weight:** 1.92kg

Flow path	Dynamic working pressure (bar)																
	0.1	0.2	0.3	0.4	0.5	0.75	1	1.5	2	2.5	3	4					
Hot	1.15	2.44	3.29	3.97	4.58	5.35	6.15	6.94	7.73	8.52	9.31	10.10	10.89	11.68	12.47		
Cold	1.01	2.33	3.31	3.87	4.52	5.12	5.72	6.32	6.92	7.52	8.12	8.72	9.32	9.92	10.52		
Mixed	1.52	3.35	4.33	5.31	6.29	7.27	8.25	9.23	10.21	11.19	12.17	13.15	14.13	15.11	16.09		
Filtered																	
Sprayhead																	

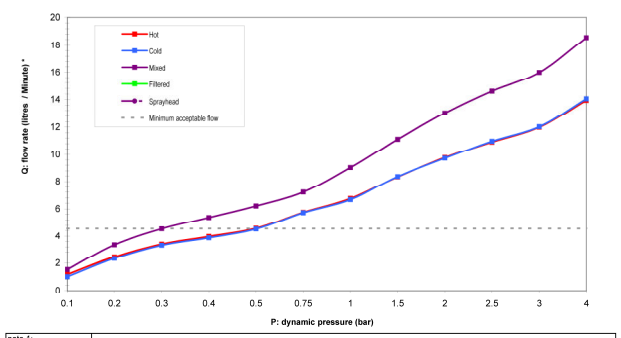

note 1: _____
note 2: _____

*Flow rate data shown is correct at the time of testing, we reserve the right to amend specification without prior notice.

- **Min / Max water pressure:** 0.30 / 5.5 bar
- **Recommended / Max water temperature:** 46°C / 70°C
- **Part G - Mixed flow rate at 3 bar (litres / min):** 15.98
- **Control valve type:** 1/2" Compression
- **Product flow characteristics:** Dual Flow
- **Non return valve(s):** No, none required
- **Aerator type:** Honeycomb Aerator
- **Accepts revolve / spray areator:**
- **Spout connection method:** Spout locking collar
- **Tail pipe inlet / outlet size:** M12x1 / 15mm outside diameter
- **Inlet pipe type / length:** Copper rigid tube / 245 mm

<p>Care instructions summary:</p> <ul style="list-style-type: none"> • Clean the mixers and showers regularly as required, using soap, do not use any other cleaners. • Regular cleaning will prevent the build up of lime scale and dirt • After cleaning rinse thoroughly with clean water to remove any cleaner residue • Residues of sink & worktop cleaners can also cause damage, so rinse with clean water after using, avoid contact with any abrasives 	<p>Warranty Summary (Full details available on request):</p> <ul style="list-style-type: none"> • Materials and workmanship defects warranted for 5 years • Valves and working parts warranted for 5 years • Surface warranty defects warranted for 1 year • O-rings, hoses & gaskets warranted for 1 year
--	---