

Product Finish: Chrome	Product code: ZP1009
	EAN13 barcode: 5060344150927



zoom
HOME INSTALLATION SYSTEM

Product features:


All Zoom taps are provided with:

- Colour coded 600mm long (cut to length) flexible John Guest hoses.
- 10 x 15mm John guest pushfit connectors.
- Non return valves (if required).
- Box spanner for easy affixing.
- Step by step instructions.



Additional information / Parts included:

Includes 2.5mm A/F Allen key

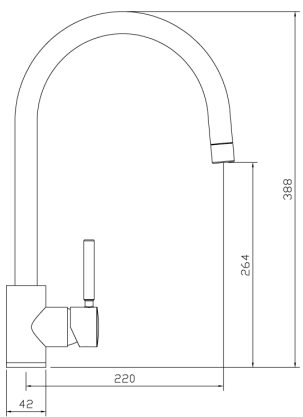


- **Overall Height / projection:** 388 mm
- **Exit reach:** 220 mm
- **Exit height:** 264 mm
- **Centre distance(s):**
- **Base diameter(s):** 42 mm
- **Recommended hole diameter:** Ø35 mm
- **Max. surface depth:** 55 mm
- **Spout diameter:** 24 mm
- **Spout aerator size:** M22x1 F

Box length: 425mm **Box depth:** 75mm

Box width: 235mm **Boxed weight:** 1.82kg

Flow path	Dynamic working pressure (bar)											
	0.1	0.2	0.3	0.4	0.5	0.75	1	1.5	2	2.5	3	4
Hot	0	1.58	2.29	3.05	3.58	4.29	5.41	6.73	7.97	8.95	9.74	11.27
Cold	0	1.68	2.59	3.11	3.58	4.29	5.41	6.73	7.97	8.95	9.74	11.34
Mixed	0	2	3.1	3.95	4.58	5.87	6.84	8.53	9.96	11.16	12.3	14.23
Filtered												
Sprayhead												

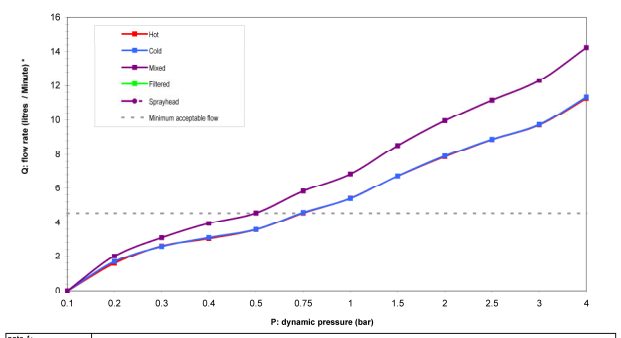

note 1: _____
note 2: _____

*Flow rate data shown is correct at the time of testing, we reserve the right to amend specification without prior notice.

- **Min / Max water pressure:** 0.50 / 5.5 bar
- **Recommended / Max water temperature:** 46°C / 70°C
- **Part G - Mixed flow rate at 3 bar (litres / min):** 12.30
- **Control valve type:** 35mm Ø Ceramic single lever
- **Product flow characteristics:** Single flow
- **Non return valve(s):** X 2 Integral to hot & cold flexis
- **Aerator type:** Honeycomb Aerator
- **Accepts revolve / spray areator:**
- **Spout connection method:** Grub screw at rear of body
- **Tail pipe inlet / outlet size:** M10x1 / 1/2" BSPP Male / 15mm ID
- **Inlet pipe type / length:** Flexible stainless braided hose / 245 mm

<p>Care instructions summary:</p> <ul style="list-style-type: none"> • Clean the mixers and showers regularly as required, using soap, do not use any other cleaners. • Regular cleaning will prevent the build up of lime scale and dirt • After cleaning rinse thoroughly with clean water to remove any cleaner residue • Residues of sink & worktop cleaners can also cause damage, so rinse with clean water after using, avoid contact with any abrasives 	<p>Warranty Summary (Full details available on request):</p> <ul style="list-style-type: none"> • Materials and workmanship defects warranted for 5 years • Valves and working parts warranted for 5 years • Surface warranty defects warranted for 1 year • O-rings, hoses & gaskets warranted for 1 year
--	---