

Product Finish: Brushed Nickel	Product code: ZP1045
	EAN13 barcode: 5060344151290



zoom
HOME INSTALLATION SYSTEM

Product features:


All Zoom taps are provided with:

- Colour coded 600mm long (cut to length) flexible John Guest hoses.
- 10 x 15mm John guest pushfit connectors.
- Non return valves (if required).
- Box spanner for easy affixing.
- Step by step instructions.



Additional information / Parts included:

2 & 2.5mm a/f Allen key included

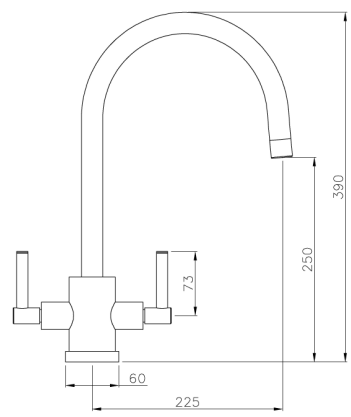


- **Overall Height / projection:** 390 mm
- **Exit reach:** 225 mm
- **Exit height:** 250 mm
- **Centre distance(s):**
- **Base diameter(s):** 60 mm
- **Recommended hole diameter:** Ø 35 mm
- **Max. surface depth:** 60 mm
- **Spout diameter:** 24 mm
- **Spout aerator size:** 22f

Box length: 430mm **Box depth:** 70mm

Box width: 340mm **Boxed weight:** 2.89kg

Flow path	Dynamic working pressure (bar)															
	0.1	0.2	0.3	0.4	0.5	0.75	1	1.5	2	2.5	3	4				
Hot	0.73	1.58	2.87	3.5	3.92	5.01	5.9	7.32	8.54	9.62	10.58	12.07				
Cold	0.43	1.84	3.09	3.66	4.14	5.35	6.26	7.64	8.13	10.22	11.34	13.16				
Mixed	1.2	2.91	4.43	5.15	5.87	7.49	8.72	10.88	12.68	14.12	15.85	18.15				
Filtered																
Sprayhead																

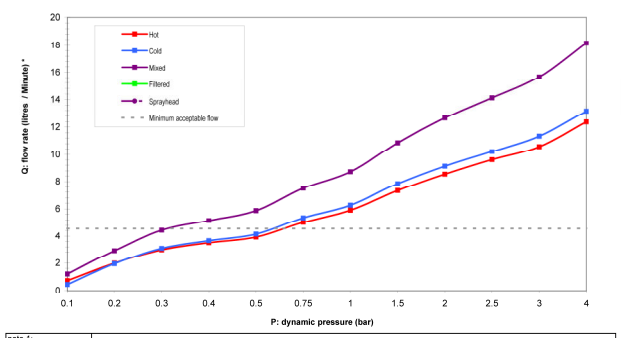

note 1: _____
note 2: _____

*Flow rate data shown is correct at the time of testing, we reserve the right to amend specification without prior notice.

- **Min / Max water pressure:** 0.40 / 5.5 bar
- **Recommended / Max water temperature:** 46°C / 70°C
- **Part G - Mixed flow rate at 3 bar (litres / min):** 15.65
- **Control valve type:** Ceramic disc QT
- **Product flow characteristics:** Dual flow
- **Non return valve(s):** No, none required
- **Aerator type:** Plastic mesh diffuser
- **Accepts revolve / spray areator:** Yes
- **Spout connection method:** Grub screw
- **Tail pipe inlet / outlet size:** M12 / 15mm Ø
- **Inlet pipe type / length:** copper rigid tube / 245 mm

<p>Care instructions summary:</p> <ul style="list-style-type: none"> • Clean the mixers and showers regularly as required, using soap, do not use any other cleaners. • Regular cleaning will prevent the build up of lime scale and dirt • After cleaning rinse thoroughly with clean water to remove any cleaner residue • Residues of sink & worktop cleaners can also cause damage, so rinse with clean water after using, avoid contact with any abrasives 	<p>Warranty Summary (Full details available on request):</p> <ul style="list-style-type: none"> • Materials and workmanship defects warranted for 5 years • Valves and working parts warranted for 5 years • Surface warranty defects warranted for 1 year • O-rings, hoses & gaskets warranted for 1 year
--	---